

- > Port size: 1/4" or 3/8" (ISO G/NPT)
- > Excelon design allows in-line installation or modular installation with other Excelon products
- > Push to lock adjusting knob with tamper resistant accessory
- > Helps protect air operated equipment from over pressurisation
- > Norgren pressure relief valves comply with category O(S.E.P.) and category 1 of the **Pressure Equipment** Directive 97/23/EC.





## **Technical features**

### Medium:

Compressed air only

### Maximum operating pressure: 20 bar (145 psi)

# Relief pressure range:

Standard

0,3 ... 10 bar (4 ... 145 psi)

0,3 ... 4 bar (4 ... 58 psi) optional,

0,3 ... 2 bar (4 ... 29 psi) optional

### Port size:

G1/4, G3/8, 1/4" or 3/8" NPT

### **Exhaust port:**

Rc1/4 with ISO G main ports 1/4 PTF with PTF main ports

### Gauge port:

Rc 1/8 with ISO G main ports 1/8 PTF with PTF main ports

### Ambient/Media temperature:


-34° ... +65°C (-30° ... +149°F) Air supply must be dry enough to avoid ice formation at temperatures below +2°C (+35°F).

### Materials:

Body: Zinc Bottom plug: Acetal Bonnet: Acetal Elastomers: CR

# Technical data - standard models

Symbol	Port size	Size	Pressure range (bar)	Weight (kg)	Model
*	G1/4	Basic	0,3 10	0,33	V72G-2GK-NMN
	G3/8	_	0,3 10	0,33	V72G-3GK-NMN

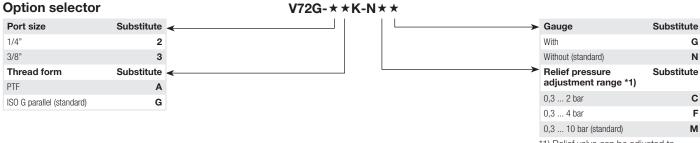


\*1) Relief valve can be adjusted to pressures in excess of, and less than, those specified. Do not use these units to control pressures outside of the specified ranges.



### Flow characteristics Inlet pressure: 10 bar (145 psi)

Port size: 1/4"

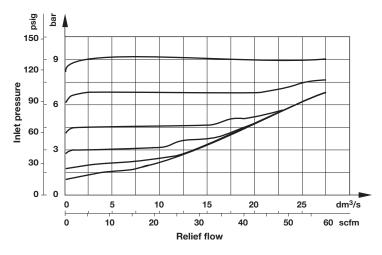


# **Accessories**




<sup>\*1)</sup> Please use a Quikmount pipe adaptor if the Quikclamp be mounted at inlet or outlet side.



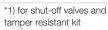

### Service kit

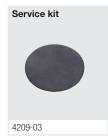

## Gauge

Center back connection, white face (for full technical specification see datasheet 8.900.900)



Pressure range	
Land Add Address	

Dai i	IVIDA	บอเ				
		•	Ø	Thread size	Model	
0 2,5	_	0 36	40 mm	R1/8	18-015-886	
0 4	0 0,4	0 58	40 mm	R1/8	18-015-990	
0 10	0 1	0 145	40 mm	R1/8	18-015-989	

<sup>\*1)</sup> primary scale

#### Center back connection, black face for North America (for full technical specification see datasheet 8.900.900) Pressure range




psig *1	bar	Мра				
1 3		•	Ø	Thread size	Model	
0 30	0 2	0 0.2	1.5" (40 mm)	1/8 NPT	18-015-214	
0 60	0 4	0 0.4	1.5" (40 mm)	1/8 NPT	18-015-211	
0 160	0 11	0 1.1	1.5" (40 mm)	1/8 NPT	18-015-212	

<sup>\*1)</sup> primary scale



## **Drawings**

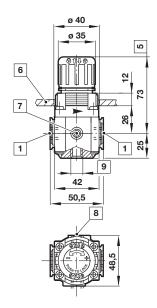


Dimensions in mm Projection/First angle



- 1 Main ports 1/4" or 3/8"
- 5 Reduces by 4 mm with knob in locked position
- 6 Panel thickness 0 ... 4 mm
- 7 Gauge port 1/8" plugged
- 8 Alternative gauge port 1/8" plugged
- 9 Exhaust port 1/4"


# **Accessories Quikclamp®**


# Quikclamp® with wall bracket

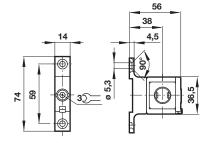

# **Porting block**

# Pipe adapter

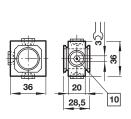


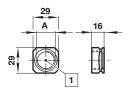

1 Main ports 1/4" or 3/8" ISO G/PTF


10 Ports (G1/4 or 1/4 NPT) plugged

# Wall mounting bracket

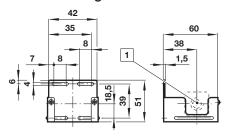


1 Main ports

# **Neck mounting bracket**

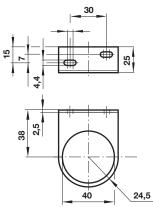


# **Shut-off valves**

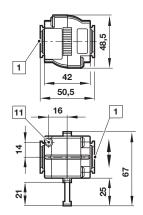

- 1 Main ports 1/4" or 3/8" ISO G/PTF
- 11 Exhaust port M5 at 3/2 valve only

# Porting block for pressure switch

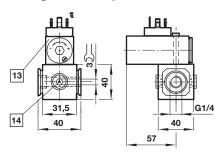

- 13 Pressure switch is not in scope of delivery
- 14 Alternative G1/4 ports plugged



### Warning

These products are intended for use in industrial compressed air systems only. Do not use these products where pressures and temperatures can exceed those listed under

## »Technical features/data«.

Before using these products with fluids other than those specified, for non-industrial applications, life-support systems or other applications not within published specifications, consult IMI Precision Engineering, Norgren GmbH.

Through misuse, age, or malfunction, components used in fluid power systems can fail in various modes.

The system designer is warned to consider the failure modes of all component parts used in fluid power systems and to provide adequate safeguards to prevent personal injury or damage to equipment in the event of such failure.

System designers must provide a warning to end users in the system instructional manual if protection against a failure mode cannot be adequately provided.

System designers and end users are cautioned to review specific warnings found in instruction sheets packed and shipped with these products.